

Val-Matic®
3"-24" Butterfly Valve
With LSA Actuator and
External Stops

Operation, Maintenance and
Installation Manual

INTRODUCTION..... 2
RECEIVING AND STORAGE 2
DESCRIPTION OF OPERATION..... 2
VALVE CONSTRUCTION..... 3
INSTALLATION..... 4
MAINTENANCE 7
TROUBLESHOOTING 10
DISASSEMBLY 10
REASSEMBLY 11
SEAT RELACEMENT 11
PARTS & SERVICE 12
WARRANTY 12



VALVE AND MANUFACTURING CORP.

905 Riverside Dr. • Elmhurst, IL 60126
Phone (630) 941-7600 • Fax (630) 941-8042
www.valmatic.com

VAL-MATIC'S 3"-24" SERIES 2000 BUTTERFLY VALVE OPERATION, MAINTENANCE AND INSTALLATION

INTRODUCTION

The Series 2000 Butterfly Valve has been designed to give years of trouble-free operation. This manual will provide you with the information to properly install and maintain the valve to ensure a long service life. The valve is a resilient seated, quarter-turn valve capable of handling air, water, or other clean fluids. For fluids with suspended solids, a Model 5800R Eccentric Plug Valve should be used. The Size, Cold Working Pressure (CWP), and Model No. are stamped on the nameplate for reference.

The "Cold Working Pressure" is the non-shock pressure rating of the valve at 150°F. The valve is not intended as a block valve for line testing above the valve rating. The valve is intended for flow toward the seat end of the valve. The typical flow direction and "Seat End" are marked on the nameplate. This allows seat adjustment while the valve is holding system pressure.

RECEIVING AND STORAGE

Inspect valves upon receipt for damage in shipment. Unload all valves carefully to the ground without dropping. Do not lift valves with slings or chains around the actuator or through the seat area. Extra care must be taken when handling electric motor and cylinder actuated valves.

Valves should remain crated, clean and dry until installed to prevent weather related damage. For long term storage greater than six months, indoor storage is recommended. The valve flange covers must remain in place, the valve must remain slightly open (3-5 degrees), and the rubber surfaces of the disc should be coated with a thin film of FDA approved grease such as Dow Corning # 7. Do not expose the resilient seat to sunlight or ozone for any extended period. Electric actuators must be powered if stored outdoors or in cool areas so that the internal heaters will prevent condensation in the control unit.

DESCRIPTION OF OPERATION

As shown in Figure 1, the valve consists of a body, a disc, and a shaft that rotates in body bearings. The resilient seat provides drop-tight shutoff.

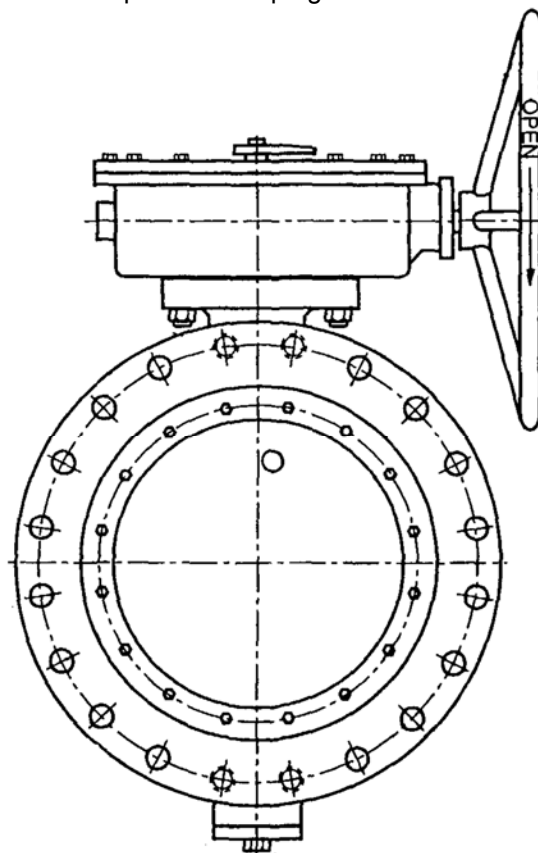


FIGURE 1. BUTTERFLY VALVE WITH ACTUATOR

The disc is rigidly attached to the shaft with taper pins. The actuator rotates the valve shaft and disc through 90 degrees of operation. The disc can rotate through the seat, but is factory set to stop in the center of the seat to provide tight shut off. Additional torque on the actuator when against the closed stop of the actuator will not provide tighter shut off. The valve seat is easily adjustable or replaceable should wear or damage occur over time.

The valve can be operated with a hand lever or gear actuator. The gear actuator as shown in Figure 1 requires multi-turn input on a 2" square nut, handwheel, or chainwheel. The valve can also be automated with power actuators such as an electric motor or hydraulic cylinder.

INSTALLATION

The installation of the valve is important for its proper operation. Some general recommendations follow. Some specific piping problems are also shown in the figures to the right.

WATER SERVICE: The normal flow direction is towards the seat end of the valve. When the flow stops, the return pressure will be held by the closed disc and the seat bolts (8) can be adjusted to provide tight shut off should the seat be worn or damaged. The normal flow direction and the words "SEAT END" are marked on the nameplate which is located on the seat end valve flange.

AIR AND GAS SERVICE: Install valve with pressure toward the end opposite the **seat end**. Lubricate resilient seat with FDA approved silicone grease such as Dow Corning #7 before installation. Gear actuators are recommended for gas service applications.


PUMP DISCHARGE SERVICE: On all horizontal pump discharge applications (Figure 3), the **seat end** should be towards the pump to allow seat adjustment with system pressure against the disc. The valve shaft should be oriented parallel to the plane of the pump discharge elbow (i.e. vertical valve shaft on a vertical discharge elbow). If the butterfly valve is downstream of a check valve, the clearance between the two discs must be checked. The butterfly valve shaft should be oriented as shown in Figure 4.

BURIED SERVICE: The valve should be installed with the shaft horizontal and the actuator nut directed upwards (Figure 4). The valve box or extension pipe should be installed so that the actuator nut and extension stem turn freely.

FLANGED ENDS: AWWA Class 150B flanged valves should be mated to ANSI Class 125# flat-faced flanges equipped with resilient gaskets. When ring gaskets are used, the bolt material shall be ASTM A307 Grade B or SAE Grade 2 Carbon Steel. Higher strength bolts may only be used with full-face gaskets.

Some of the flange holes are tapped near the shaft ends of the valve as shown on the Sales Drawing. Special bolt lengths may be needed. An engagement of at least one bolt diameter is typically used for the flange bolts used in the tapped flange holes.

AWWA Class 250B flanged valves can be mated with either ANSI Class 125# or ANSI Class 250# flanges depending on the specified flange drilling. Class 250B valves can be mated with flat-faced or raised-face flanges with full face or ring gaskets and with no bolting restrictions.

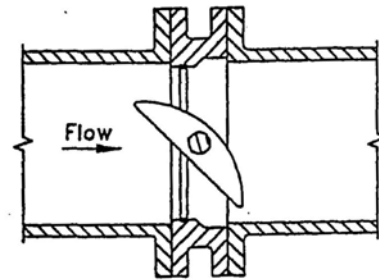

Flow Towards Seat End

FIGURE 3. PUMP DISCHARGE.

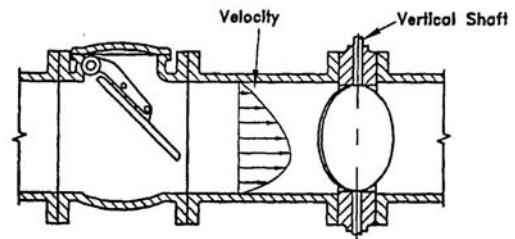


FIGURE 4. UPSTREAM CHECK VALVE

SIZE	MIN. I.D.	SIZE	MIN. I.D.
3"	--	14"	11.7
4"	--	16"	14.0
6"	3.75	18"	16.4
8"	5.10	20"	18.5
10"	6.70	24"	22.8
12"	9.50		

TABLE 2. MINIMUM PIPE I.D. TO CLEAR FLANGED BFV

SIZE	MIN. I.D.	SIZE	MIN. I.D.
4"	3.12"	14"	12.75"
6"	5.26"	16"	14.44"
8"	7.31"	18"	16.58"
10"	9.25"	20"	18.75"
12"	10.93"	24"	22.44"

TABLE 3. MINIMUM PIPE I.D. TO CLEAR MECHANICAL JOINT BFV

INSTALLATION (Cont'd)

In all installations, the valve and adjacent piping must be supported and aligned to prevent cantilevered stresses on the valve. Lower valve into line using slings or chains around the valve body. Lubricate the flange bolts or studs and insert them around the flange. Lightly turn bolts until gaps are eliminated.

The torquing of the bolts should then be done in graduated steps using the cross-over tightening method. If leakage occurs, allow gaskets to absorb fluid and check torque and leakage after 24 hours. Do not exceed bolt rating or crush gasket more than 50 percent of its thickness; see tables below.

150B FLANGE BOLT TORQUES			
VALVE SIZE (in)	BOLT DIA (in)	RECOM TORQUE (ft-lbs)	MAX TORQUE (ft-lbs)
3,4	5/8	25	100
6	3/4	30	150
8	3/4	40	150
10	7/8	45	200
12	7/8	65	200
14	1	80	300
16	1	90	300
18	1 1/8	100	425
20	1 1/8	120	425
24	1 1/4	150	600

CAUTION

The use of raised-face flanges or excessive bolt torque may damage valve flanges.

250B FLANGE BOLT TORQUES			
VALVE SIZE (in)	BOLT DIA (in)	RECOM TORQUE (ft-lbs)	MAX TORQUE (ft-lbs)
4,6	3/4	30	150
8	7/8	50	200
10	1	75	300
12	1 1/8	100	425
14	1 1/8	100	425
16	1 1/4	150	600
18	1 1/4	150	600
20	1 1/4	200	600
24	1 1/2	300	1000

MECHANICAL JOINT BOLT TORQUES			
VALVE SIZE (in)	T-BOLT DIA (in)	RECOM. TORQUE (ft-lbs)	MAX. TORQUE (ft-lbs)
4	3/4	75	90
6	3/4	75	90
8	3/4	75	90
10	3/4	75	90
12	3/4	75	90
14	3/4	75	90
16	3/4	75	90
18	3/4	75	90
20	3/4	75	90
24	3/4	75	90

TABLE 4. FLANGE & MJ NUT TORQUES

MECHANICAL JOINT ENDS: Clean ends of mating pipe and valve sockets with soapy water (Figure 5). Place lubricated gasket and retainer gland over pipe end prior to installing valve. Install valve socket over pipe. Press gland and gasket toward valve until gasket is evenly set into valve socket.

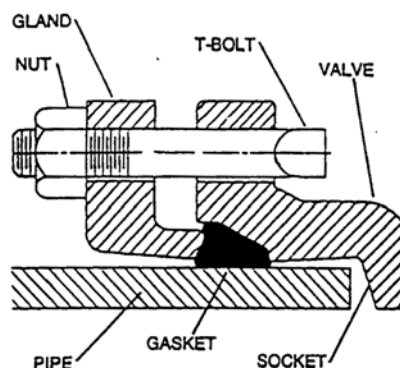


FIGURE 5. MECHANICAL JOINT INSTALLATION

Insert T-bolts in valve flange and hand tighten nuts. Torque nuts in four graduated steps using the cross-over tightening method without exceeding the torque listed in Table 4. Maintain an equal gap between the gland and the face of the valve at all points around the socket.

If a tight connection is not achieved, then the joint should be disassembled, thoroughly cleaned, and reassembled. Over-tightening, may cause damage to the valve or gland.

LEVER OPERATED VALVES: 8" and smaller valves may be equipped with a top-mounted lever for direct quarter-turn operation. To open the valve, slowly rotate the lever 90° in the counter-clockwise CCW direction.

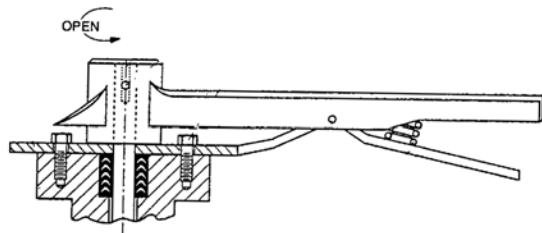


FIGURE 6. LEVER ACTUATOR

VALVE SIZE	PRESSURE (PSI)	MODEL NUMBER	L (INCHES)
3"-4"	150	4BL	12
6"	150	6BL	12
8"	75	6BL	12
10"	75	10BL	18
12"	75	10BL	18

GEAR OPERATED VALVES: Butterfly Valves are available with a two types of manual gear actuator.

A **worm-gear actuator** has a multi-turn worm that drives a large sector gear through 90 degrees of rotation. Worm gears provide uniform motion and torque multiplication throughout the stroke.

A **traveling nut actuator** has a threaded rod that drives a nut from one end of the housing to another. The traveling nut in turn drives a slotted lever through 90 degrees of rotation. Traveling nut actuators provide slower rotation and greater torque multiplication at the ends of travel.

Both gear types are self-locking and multiply the turning force on the handwheel or nut so that valves can be operated with ease. A clamp-on chainwheel kit can also be used for installations high above the floor. An indicator on the top of the actuator housing indicates the position of the valve plug. The handwheel or nut must be rotated through 7-50 turns (depending on model) to open or close the butterfly valve. The direction of rotation to open the valve is indicated on the 2" square actuator nut and handwheel. The standard direction of rotation is open left or counter-clockwise. Nuts with opposite rotation (open right) will be painted red to indicate their special rotation.

CAUTION

Fill LSA Actuators with at least 90% grease prior to mounting electric motor actuators.

GEAR ACTUATOR ADJUSTMENT: The standard gear actuator is provided with factory-set open and closed position stops to properly center the closed disc seal in the body seat. No field adjustment is necessary.

VALVE SEAT ADJUSTMENT: If the valve is found to leak in service, the rubber seat can be adjusted. With the valve in the closed position, tighten the three seat bolts in the area of the leak 1/4 turn at a time until the leak stops.

The factory settings for the seat bolts are given in Table 5 for reference in case the valve can not be tested while under pressure. These torques are for use with the disc in the closed position. Torques greater than 150% of these will make the valve difficult to operate.

SIZES	CLASS 150B	CLASS 250B
3"-8"	5 ft-lbs	7 ft-lbs
10"-20"	10 ft-lbs	12 ft-lbs
24"	15 ft-lbs	17 ft-lbs

TABLE 5. SEAT BOLT TORQUES

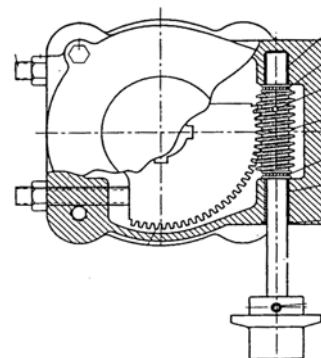


FIGURE 7. WORM GEAR ACTUATOR

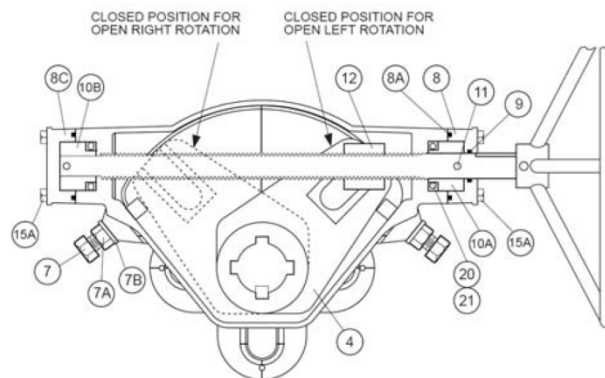


FIGURE 8. TRAVELING NUT ACTUATOR

MAINTENANCE

The Series 2000 Butterfly Valve requires no scheduled lubrication or maintenance other than regular exercising. The exercising is achieved by fully opening and closing the valve to verify smooth operation. If operation is difficult, it may be necessary to flush sediment from the valve by opening and closing the valve several times under flowing conditions or checking the lubricant in the gear actuator.

CAUTION

Opening and Closing of the valve should be done slowly to prevent water hammer.

The recommended interval for exercising is every six months or annually if the valve is regularly operated. Over the life of the valve, inspection and some regular adjustments may be needed as given below.

PACKING ADJUSTMENT: The shaft is equipped with a set of V-shaped packing which is factory-set for drop-tight service. The packing is pressure assisted and does not normally require adjustment. Should leakage occur, the packing can be replaced.

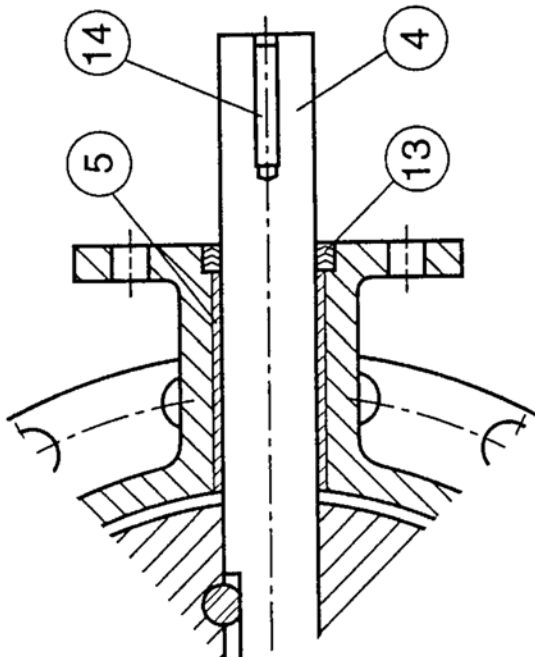


FIGURE 9. 3"-24" PACKING ASSEMBLY

PACKING REPLACEMENT: To replace the packing, it is recommended that the line be drained and the actuator removed. The valve can remain in the line.

1. To replace the packing, first open the valve and drain the line.

WARNING

Drain Line and close valve before removing actuator or valve may rotate suddenly causing bodily injury or damage to property.

2. Close the valve to hold the plug in position. For power actuators, turn off and lock out electrical and hydraulic supplies before proceeding.
3. Remove small round cover on actuator to expose shaft and key.
4. Remove actuator mounting bolts and adapter plate or packing retainer plate.
5. Lift actuator and plates from valve taking care not to lose square key (14).
6. Remove old packing (13) with packing hook.
7. Lubricate new packing with FDA grease and set in place one ring at a time taking care not to bend over the lips of the packing rings.
8. Reinstall actuator mounting plates. Clean off all grease from the surfaces of the actuator mounting surfaces.
9. With valve in the closed position, place actuator over valve and reinsert key (14).
10. Finally, with valve closed, install cover on actuator indicating "Closed".

MAINTENANCE (Cont'd)

WORM GEAR ACTUATOR MAINTENANCE: A typical worm gear actuator is shown in Figure 10 and consists of a worm (3) mounted on an input shaft (9). The worm engages a segment gear (2). When the worm is turned, it drives the segment gear through 90° of rotation. The rotation of the segment gear is displayed by the top indicator (5). The gears are lubricated with EP2 grease in a cast iron housing (1). The open and closed positions of the segment gear (2) are controlled by the end position stop bolts (20). The stops can be adjusted by loosening the lock nut (21) and rotating the bolts (20).

The gear box is factory lubricated and sealed. No regular maintenance is required. If difficult operation is observed, the cover can be removed and the unit inspected for wear. All moving parts should be coated with grease. The grease should have an even and smooth consistency. If needed, coat all moving parts with an EP-2 grease such as Mobil Mobilux EP2. Buried units should be packed 100% with grease.

ITEM	DESCRIPTION	MATERIAL
1	Housing	Cast Iron
2	Segment Gear	Ductile Iron
3	Worm	Alloy Steel
4	Cover	Cast Iron
5	Indicator	Cast Iron
6	O-Ring	Buna-N
7	Thrust Bearing	Carbon Steel
8	Bearing	Bronze
9	Shaft	Carbon Steel
10	Gasket	Non-Asbestos
11	Handwheel	Cast Iron
12	Operating Nut	Cast Iron
13	Chainwheel	Steel
14	Cover Bolt	Carbon Steel
15	Indicator Bolt	Steel
18	Worm Pin	Steel
19	Handwheel Pin	Steel
20	Stop Screw	Steel
21	Jam Nut	Steel
23	Oil Seal	Steel & Rubber
	Grease	EP-2

TABLE 6. WORM GEAR PARTS LIST

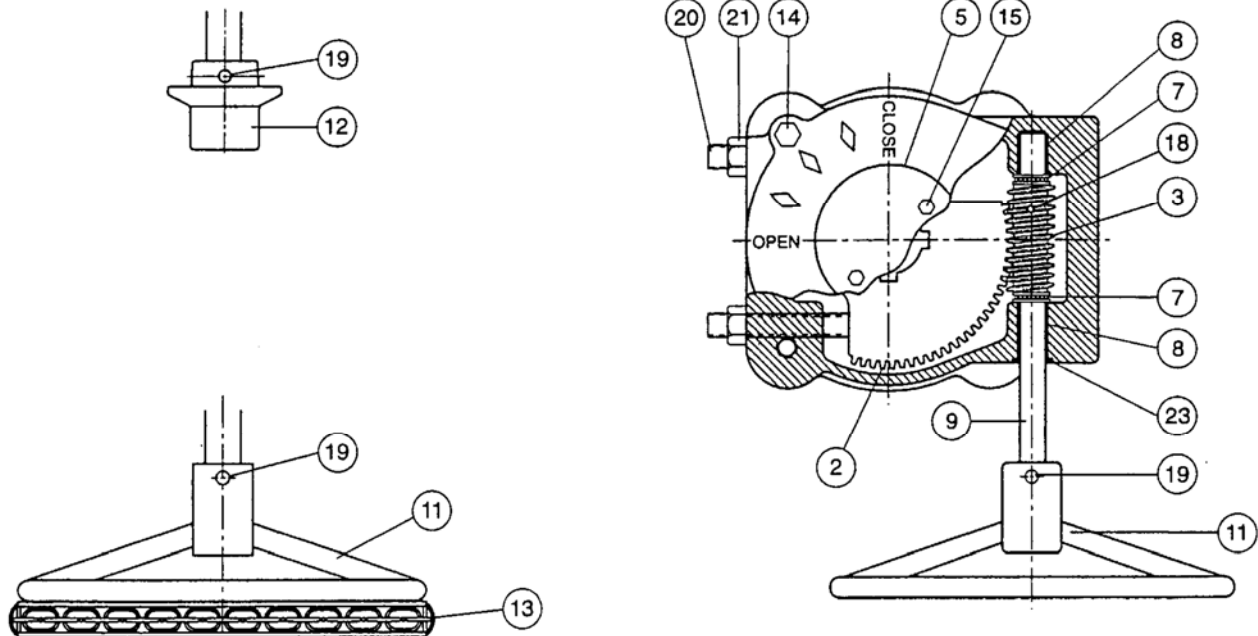


FIGURE 10. GEAR ACTUATOR CONSTRUCTION

MAINTENANCE (Cont'd)

TRAVELING NUT ACTUATOR MAINTENANCE: A typical traveling nut actuator is shown in Figure 11 and consists of a threaded nut (12) which travels back and forth on a threaded stem (14). The stem is lubricated with EP2 grease in a cast iron housing (1). The nut, in turn, drives a slotted lever (4) through 90 degrees of travel. The lever (4) drives the valve shaft with a square key. The rotation of the shaft is displayed by the top indicator (19). The full open and closed positions are controlled by the stop nuts (6). The stop nuts can be adjusted by pounding out the pin (7) with a drift punch and rotating the stop nut ½ turn. The gear box is factory lubricated and sealed. No regular maintenance is required. If difficult operation is observed, the cover can be removed and the unit inspected for wear. All moving parts should be coated with grease. The grease should have an even and smooth consistency. If needed, coat all moving parts with an EP-2 grease such as Mobil Mobilux EP2. Buried units should be packed 100% with grease.

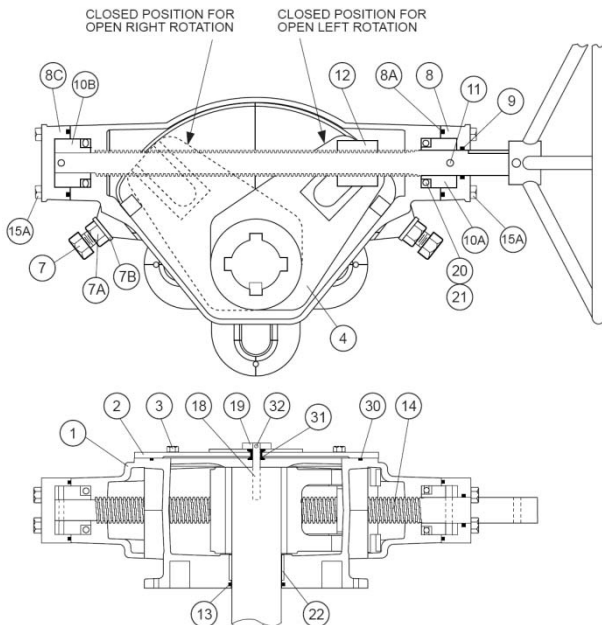


FIGURE 11. TRAVELING NUT ACTUATOR

ITEM	DESCRIPTION	MATERIAL
1	Housing	Cast Iron
2	Housing Cover	Cast Iron
3	Cover Bolt	Steel
4	Lever	Ductile Iron
5	Plug	Steel
6	Stop Nut	Steel
7	Stop Nut Pin	Steel
8	End Cap	Cast Iron
9	End Cap O-ring	Buna-N
10	Stem Collar	Bronze
11	Collar Pin	Steel
12	Crosshead	Bronze
13	Shaft O-ring	Buna-N
14	Stem	Alloy Steel
15	End Cap Bolts	Steel
16	Handwheel	Steel
17	Pin	Steel
18	Indicator Bolt	Steel
19	Indicator	Aluminum
20	Needle Bearings	Steel
21	Bearing Race	Steel
22	Shaft Bearing	Teflon/Fiberglass
30	Gasket	Composition Rubber
31	Indicator Extension	Steel
32	Extension Pin	Steel
33	Operating Nut	Cast Iron
34	Chainwheel Kit	Ductile Iron
35	Grease	EP-2

TABLE 7. TRAVELING NUT ACTUATOR PARTS

TROUBLESHOOTING

Several problems and solutions are presented below to assist you in troubleshooting the valve assembly in an efficient manner.

Leakage at Valve Shaft: Replace packing.

Leakage at Flanges: Tighten flange bolts, replace gasket.

Valve Leaks when Closed: Flush debris from seat by cycling valve. Adjust actuator closed stop. Inspect seat for damage and adjust seat bolts 1/4 turn at a time.

If the valve continues to leak after adjustment, check for the following items and make the corrections.

1. Verify that there is no damage to the rubber seat. Replace if torn or damaged.
 2. Check that the metal set in the body is clean and free of scale and scratches.
 3. Check that the actuator is fully closed and the seal is centered in the body seat. Adjustment to the actuator stop nuts or bolts may be necessary.
 4. Check the roundness of the adjoining pipe and pipe flange. Pipe loads may cause distortion to the adjoining pipe and valve.
 5. Verify that the test pressure is less than the cold working pressure (CWP) shown on the valve nameplate.
- Hard to Open: Flush line of debris. Check grease in actuator. Check interior of valve for deposits or debris. On buried valves, check alignment of operating stem and nut.
 - Leaking Oil: Tighten actuator cover bolts. If leak persists, remove actuator cover, inspect grease, and replace actuator gasket.
 - Noisy Operation: Flow noise is normal. Loud flow noise similar to hammering may be cavitation from dropping high pressures across valve; review application of valve. For gear actuator noise, inspect grease; add new grease if there are uncoated moving parts or grease has broken down into oil.

DISASSEMBLY

Disassembly may be required to repair the valve. Work on the valve should be performed by a skilled mechanic with proper tools and a power hoist for large valves. The valve must be removed from the pipeline for disassembly. The actuator can be removed with the valve in the line (the line must be drained) or after the valve is removed from the line. Refer to Figure 2 for valve construction and parts.

WARNING

Open valve and drain line before removing actuator or the valve may suddenly open causing injury or fluid loss. Place valve in closed or slightly open position to remove from the line or damage to the disc edge may occur.

1. Open valve slightly and drain the pipeline. Close valve until disc edge just touches the seat. Valve and actuator can be removed as a unit from the pipeline.
2. Remove the small cover on the actuator to expose the shaft key. Remove the actuator mounting bolts and lift actuator from valve taking care not to lose key (14). Access to the traveling nut actuator will be under the actuator cover.
3. Remove bottom cap screws (16) and thrust bearing cap (15). Remove the seat bolts (8) and seat retaining ring (7).
4. Matchmark the taper pins with the disc holes. Remove the taper pin nuts (11) and taper pins (9). Press or hammer out the shaft (4) with a dead blow hammer. The bearings (5) will likely be pushed out with the shaft.
5. Clean and inspect parts. Replace worn parts as necessary and lubricate parts with FDA grease.

REASSEMBLY

All parts must be cleaned and gasket surfaces should be cleaned with a stiff wire brush in the direction of the serrations or machine marks. Worn parts, gaskets and seals should be replaced during reassembly. Bolts should be lubricated and torqued per Table 8 during reassembly.

SIZE	TORQUE (FT-LBS)
3/8"-16	20 - 30
7/16"-14	30 - 50
1/2"-13	45 - 75
5/8"-11	100 - 150
3/4"-10	150 - 250
7/8"-9	200 - 350
1"-8	300 - 500
1 1/8"-7	450 - 700
1 1/4"-7	650 - 1000

TABLE 8. LUBRICATED BOLT TORQUES

1. Insert new bearings (5) into both ends of the valve body (1) and insert the shaft (4) through the body and disc (3).
2. Install taper pins (9) with washers (12) and nuts (11).
3. Install new seat (6), retaining ring (7) and seat bolts (8) into disc. Apply thin film of FDA silicone grease such as Dow Corning #7 to rubber surface. Lightly tighten seat bolts until bolt heads touch ring.
4. Lubricate ID and OD of packing set with FDA grease and install in packing bore one ring at a time taking care to keep lips pointing down toward valve.
5. Center disc in body and install bottom thrust bearing (18) and cap (15). Secure with cap screws (16).
6. Torque cap screw to torque given in Table 8.
7. Insert key (14) into shaft and place actuator over valve. Reinstall actuator mounting bolts and torque per Table 8. Install cover on actuator. Cycle valve. Apply pressure to valve and check for seat leakage. Tighten seat bolts ½ turn at a time as necessary.
8. If valve does not shut off tight, adjust the closed position stops as described on page 6 under "Closed Position Adjustment".

SEAT REPLACEMENT

If the seat is badly worn or damaged, gain access to valve interior and remove existing cap screws, seat retaining ring, and seat.

1. Clean mating surfaces of body seat, disc, and retaining ring with stiff wire brush in the direction of the machine grooves.
2. Install new seat (6) onto disc so that the o-ring bead side is against the disc with the holes aligned.
3. Start at the top of the disc and install a section of retaining ring (7) with three new seat hex head cap screws (8) and lightly tighten seat bolts until the bolt heads touch the retaining ring.
4. Apply a thin film of FDA silicone grease such as Dow Corning #7 to the exposed rubber surface and close the valve so that the disc is level with the flange face within +/- 1/8 in.
5. Tighten the seat hex head cap screw in a cross-over pattern in two steps to the torque given in Table 5 using a socket wrench.
6. Cycle valve open and closed and verify that disc closes within +/- 1/8 in of center. Conduct a pressure test. If necessary, tighten seat hex head cap screw ½ turn to stop any leakage.

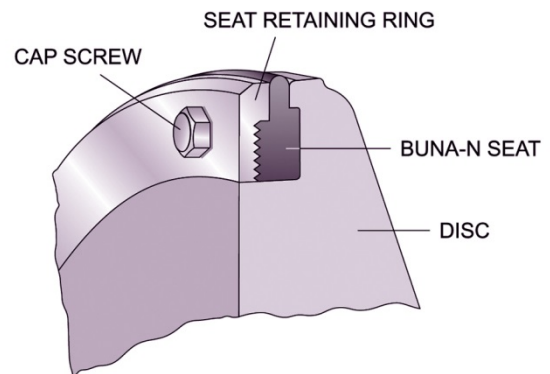


FIGURE 12. SEAT REPLACEMENT

PARTS AND SERVICE

Parts and service are available from your local representative or the factory. Make note of the valve Size, Series No, and Serial No. located on the valve nameplate and contact:

Val-Matic Valve and Mfg. Corp.
905 Riverside Drive
Elmhurst, IL 60126
PH: 630 / 941-7600
FAX: 630 / 941-8042

A sales representative will quote prices for parts or arrange for service as needed

LIMITED WARRANTY

All products are warranted to be free of defects in material and workmanship for a period of one year from the date of shipment, subject to the limitations below.

If the purchaser believes a product is defective, the purchaser shall: (a) Notify the manufacturer, state the alleged defect and request permission to return the product; (b) if permission is given, return the product with transportation prepaid. If the product is accepted for return and found to be defective, the manufacturer will, at his discretion, either repair or replace the product, f.o.b. factory, within 60 days of receipt, or refund the purchase price. Other than to repair, replace or refund as described above, purchaser agrees that manufacturer shall not be liable for any loss, costs, expenses or damages of any kind arising out of the product, its use, installation or replacement, labeling, instructions, information or technical data of any kind, description of product use, sample or model, warnings or lack of any of the foregoing. NO OTHER WARRANTIES, WRITTEN OR ORAL, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY, ARE MADE OR AUTHORIZED. NO AFFIRMATION OF FACT, PROMISE, DESCRIPTION OF PRODUCT OF USE OR SAMPLE OR MODEL SHALL CREATE ANY WARRANTY FROM MANUFACTURER, UNLESS SIGNED BY THE PRESIDENT OF THE MANUFACTURER. These products are not manufactured, sold or intended for personal, family or household purposes.



VALVE AND MANUFACTURING CORP.

905 Riverside Dr. • Elmhurst, IL 60126
Phone (630) 941-7600 • Fax (630) 941-8042
www.valmatic.com